

www.airties.com



AirTouch



Three years warranty



24/7 people support
0845 557 5782 (from United Kingdom)
+90 212 444 0239 (International)



YM.AP.44.10.UM.EN.D00REV13102011

Visit www.airties.com for full list of technical support telephone numbers.



Quick Installation Guide

Wireless Access Point

Air 4410

Step 1

Cabling

First complete the cabling process as shown in the diagram.

1. Connect the power adapter inside your box to the power inlet socket of your device and plug into the electric socket
2. Turn on the Air 4410 by switching the On/Off button to position "1".
3. Connect the Ethernet cable inside the box to the Air 4410's Ethernet port and connect the other end to an ADSL modem or switch's Ethernet port.

After completing the cabling process, insert the Easy Installation CD to your computer (Windows XP, Vista or 7). The Easy installation Program will start automatically. Non Apple users please see section **Installation for Apple Users** (page 1) on the full user manual contained within the accompanying CD.

Cabling




Step 2

Setup

AirTies Network Assistant will run automatically.

Click the Next button to setup your device.

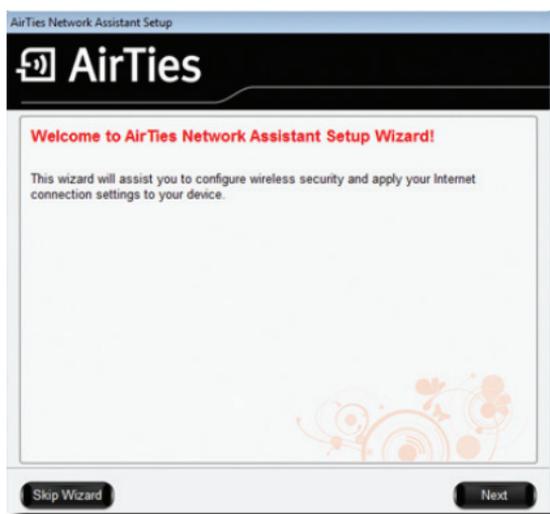

Step 3

a) XP and Vista users: In the wireless settings menu, you can configure your device's security level, password and Wireless Network Name (SSID). If you do not change anything in these settings, the AirTies service software automatically configures your wireless security settings and creates a password at the highest security level. After clicking the **Next** button, the program will automatically save these settings to the Air 4410 and create a wireless profile to allow you to wirelessly connect your computer to it.



b) Windows 7 users: If your operating system is Windows 7, you can configure your wireless settings automatically by using the AirTouch features. After pressing the “**AirTouch**” button on your device for two seconds, click on “**AirTouch**” as shown on the following screen.



With AirTouch, your wireless network will be automatically secured. Click the **Next** button.



Step 4

You have the option to register your product with AirTies. To register with AirTies, enter your name, e-mail address and phone number. Click the **Finish** button.



AirTies Network Assistant has successfully completed installation and device setup.

Please enter user details below to register Network Assistant with AirTies

Register device to a new user

Full name

Email address

Phone number

Register all devices on the network with these credentials

Skip Wizard

Finish

Congratulations! You successfully configured your device as a wireless Access Point.

Configuring Universal Bridge

The Universal Bridge feature allows for any device with an Ethernet port to be wirelessly connected to an existing wireless Access Point. This allows for devices such as Set Top Boxes, Connected TVs and printers to be connected to an existing Wi-Fi wireless network.

For details of how to configure this please see the **Advanced Settings** (Page 12) and **Universal Bridge** (Page 21) on the full user manual contained within the accompanying CD.

Once the Universal Bridge has been configured, any device that is attached to the Air 4410 will be wirelessly connected to the home network.

Configuring AirTies Mesh

If you have more than one AirTies wireless product then you can extend the coverage of your wireless network by repeating the wireless signal and creating a Mesh.

Below is an explanation of how to increase the range of a wireless network using an Air 4410 and an Air 5452 AirTies wireless ADSL gateway.

- **AirTies Air 5452** The device provides access to the Internet using ADSL2+ and has a Wi-Fi Access Point onboard.
- **AirTies Air 4410** is used as a repeater for the Air 5452 to increase the range of the wireless signal.

1. AirTies Air 5452 Settings

The Air 5452 is configured using the Easy Installation process and should be powered on, connected to the Internet and have wireless security configured.

2. AirTies Air 4410 Settings

The Air 4410 is placed at a location between the Access Point and an area that may be suffering from weak wireless coverage. Power on the device.

3. AirTouch Settings

Once both devices are powered on it is easy to configure AirTouch

- A. On the Air 5452 press and hold the AirTouch button for 3 seconds. It should start blinking.



B. Immediately after pressing AirTouch on the Air 5452 (maximum two minutes) on the Air 4410 press and hold the AirTouch button for 3 seconds. It should start blinking.



Air 4410

After approximately 30 seconds the lights should stop blinking, turn off for a few seconds and then turn on to be solid. The Mesh is now created and the Air 4410 is repeating your wireless signal.

AirTouch with Mesh can extend your wireless network that easily!

4. Network management with Simplified with AirTouch

For a network that has Mesh configured using AirTouch, any changes that are made to the wireless settings are automatically copied and applied to every other AirTies device in the network. For example, if a network contains three AirTies repeaters then changing the wireless password on one of the devices will update the wireless password for all devices. This simplifies managing the network and saves the end user time.

AirTouch removes the complications and time required to configure the wireless network settings. The AirTouch one touch setup is **easy, secure** and **automatic**. With AirTouch it is also very easy and secure to extend the coverage of the wireless network by adding other AirTies devices and creating a MESH wireless network.

